
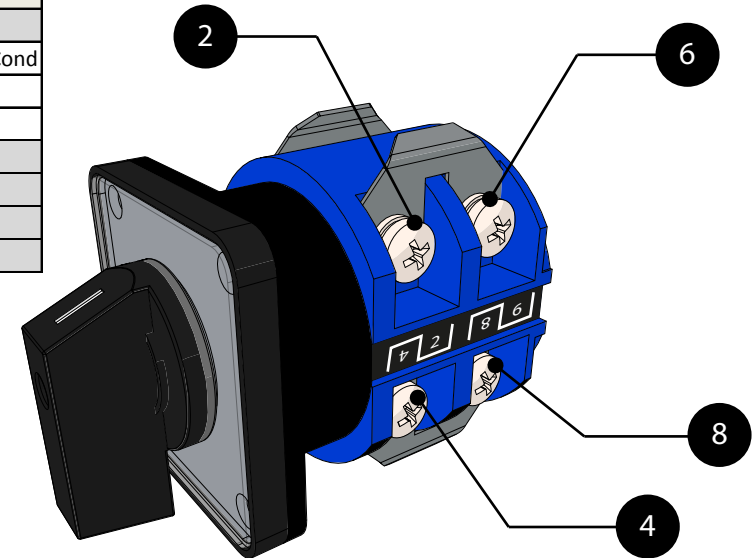


**3 Position Rotary Switch wiring configurations - Applies to all Pop-Up machines with internal chargers fitted**

Terminal	Terminal Functions		
	Original Switch	Type I	Type II
1			
2	Linked to 4		Output / Batt Cond
3	Charger	Input	Input
4	Linked to 2	Charger	Charger
5	Output	Output / Batt Cond	
6	Input		
7			
8			

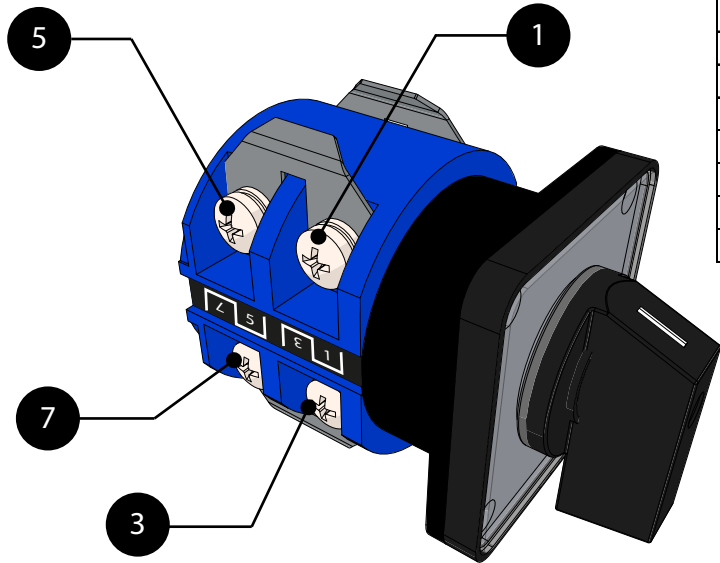

Due to the change of the 3 position switch on Eco 6 & 8 machines, replacement switches for all Pop-Up and Pop-Up+ machines will have slightly different wiring schemes for this switch.

Please follow the wiring schemes laid out in the tables above. Main switch illustrations show terminal layouts as found on all types of switch.

*Note: Remove any link wire and use link plates as shown in the illustrations above*