

**Mi** ***POD***

1250



**ASSEMBLY GUIDE**

| Section              | Page No |
|----------------------|---------|
| Contents             | 1       |
| Introduction         | 2       |
| Know Your MiPOD      | 3       |
| Safety Do's & Don'ts | 4       |
| Assembly Steps 1 & 2 | 5       |
| Assembly Steps 3 & 4 | 6       |
| Moving Your MiPOD    | 7       |
| Safety Checklist     | 8       |
| Specifications       | 9       |
| Notes                | 10      |

**MiPOD** is a versatile and high quality podium designed in accordance with the latest testing and quality standards.

**Our priority** is to help ensure the safe operation of our products, so please pay particular attention to the safety tips on page 4.

**We want you** to enjoy the safe use of your **MiPOD** with the minimum of fuss. This guide is designed for **MiPOD** 1250 and will get you up and running as quickly and as safely as possible.

**Scan this** QR code to view the video of **MiPOD** in operation.



[www.popupproducts.co.uk/videos/](http://www.popupproducts.co.uk/videos/)

**Visit PASMA** and **HSE** for further reference.



| Parts Listing |                           |    |                         |
|---------------|---------------------------|----|-------------------------|
| 1             | Ladder                    | 8  | Platform                |
| 2             | Ladder Transport Hook     | 9  | Folding Section         |
| 3             | Podium Frame              | 10 | Gate                    |
| 4             | Ladder Attachment Bracket | 11 | Platform Transport Hook |
| 5             | Ladder Attachment Hook    | 12 | Transport Strap         |
| 6             | Foot                      | 13 | Platform Lock           |
| 7             | Braked Wheel              | 14 | Anti-surf Pad           |

Do's



Read the instructions



Inspect before use



Only ascend or descend the LLVWP using the access provided



Face the access when ascending and descending

Don'ts



Do not use on loose or slippery surfaces




Never more than one person



Do not overreach



Never stand on the side protection or use boxes, stepladders or other objects to gain height

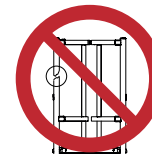

Do not use damaged equipment



Do not use on sloping or uneven surfaces



Never work near power lines or other electrical equipment



Never use as a means of access to another place



Never stand on the access ladder to work



Never move when a person is standing on a work platform



Beware of finger traps where these potentially exist


## Step 1

Remove both the platform and ladder from the transport locations and retain for later. Undo the transport strap.



## Step 2

Open out the front of your MiPOD enough to gain access to the folding section. With both hands, push the folding section and ensure the locking joints engage.

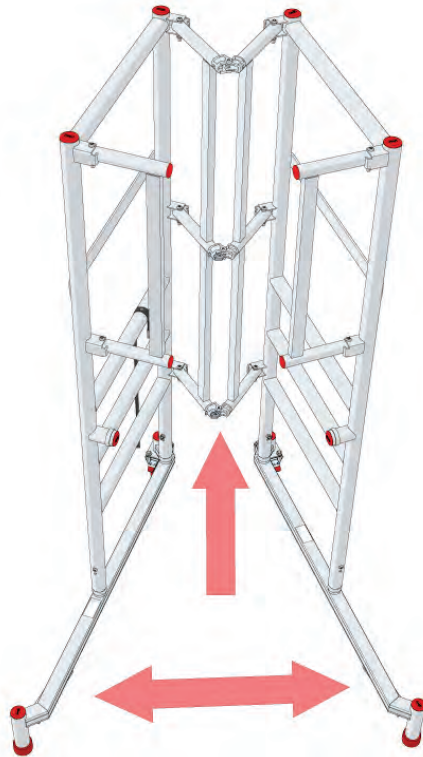

## Step 3

Assemble your MiPOD as shown by positioning the platform at the desired level and ensuring the platform lock is engaged around the tube (A). Attach the ladder by connecting the ladder hooks onto the ladder attachment tubes (B) and finally engaging the ladder attachment brackets over the baseframe (C). Carry out inspection of the unit using the Safety Checklist which can be found on page 8.



## Step 4

Your MiPOD 1250 platform can be moved between the upper level of 1250mm and the lower level of 1000mm.

To move the platform, disengage the platform locks on the platform hooks, lift, then slide the platform out of your MiPOD and reposition it at the desired level. Re-engage the platform locks.



### Moving Your MiPOD

To move your MiPOD once built, simply tilt it onto the wheels by lifting the feet at the ladder end of the unit. MiPOD has a natural balance point and this makes it easy to manoeuvre once it is in this 'wheelbarrow' position. When in position at the work area, simply lower the unit onto its feet and check all components before use.



### 6 Point Pre-Use Checklist for Users


|   |                |  |   |
|---|----------------|--|---|
| 1 | Components     | check carefully to ensure there is no damage | ✓ |
| 2 | Environment    | check your MiPOD is located on level ground  | ✓ |
| 3 | Platform       | check it is securely located                 | ✓ |
| 4 | Ladder         | check it is attached correctly               | ✓ |
| 5 | Locking Joints | check they have been fully engaged           | ✓ |
| 6 | Guide          | ensure you understand this assembly guide    | ✓ |

### Damaged Components

|   |                    |   |   |
|---|--------------------|---|---|
| 1 | Damaged Components | <b>DO NOT</b> use damaged components in your MiPOD structure. Damaged components found during inspection must be quarantined until assessed and repaired by a qualified repairer or replaced with new components. | ✗ |
|---|--------------------|---|---|



| Specifications             | MiPOD 1250 |
|----------------------------|------------|
| Overall Length (mm)        | 1490       |
| Overall Width (mm)         | 780        |
| Overall Height (mm)        | 2230       |
| Platform Dimensions (mm)   | 625 x 510  |
| Lower Platform Height (mm) | 1000       |
| Upper Platform Height (mm) | 1250       |
| Gross Weight (kg)          | 69         |
| Articulated Weight (kg)    | 28         |

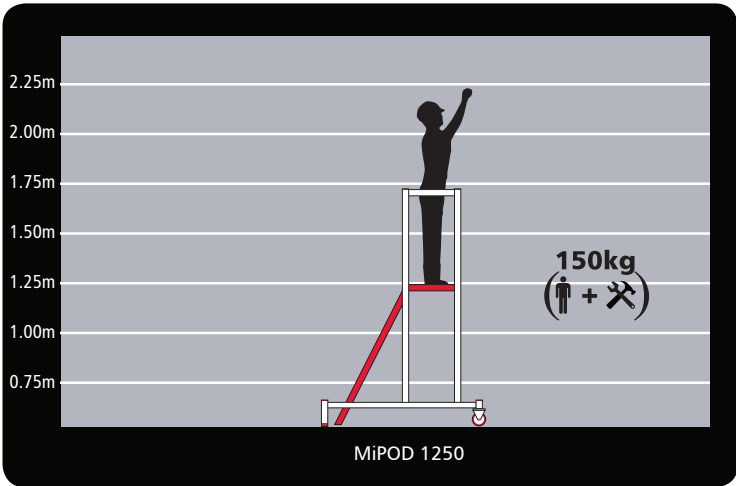

NOTES \_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_



ISO9001 : 2008  
Certificate No. FM 513133





[popupproducts.co.uk](http://popupproducts.co.uk)

+44 (0)1244 833 933

[info@popupproducts.co.uk](mailto:info@popupproducts.co.uk)